


SPRING TENSION DRIVE BOX TENSIONING THE DRIVE BOX

Our Spring Tensioning system is a simple and accurate way to correctly tension the conveyor belt each and every time.



There is a yellow washer installed at the end of a spring on both sides of the belt, below the drive box.

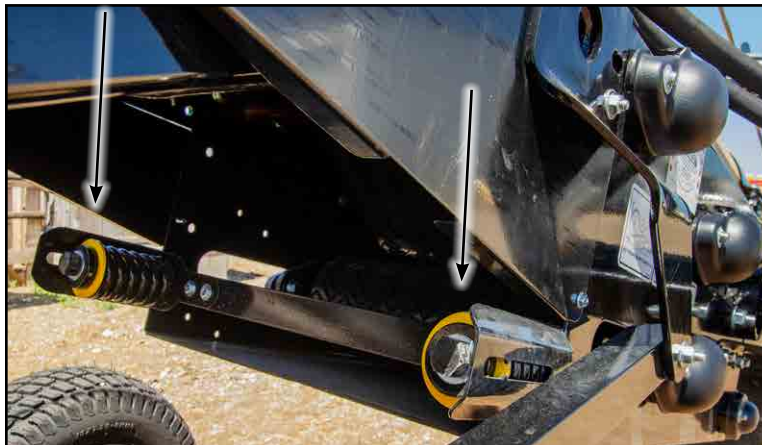

Outside both springs is an indicator window with integrated arrows, top and bottom.

Simply, align the yellow washer with the arrows and the belt is tensioned.